



TEF

MX03-LTE-M-EN54

Dual-Path/Sole-Path Communicator

Connections & Setup for the TEF Fire Alarm Panel

Doc. number: 06014, 06/2024

2024-01 MX03-LTE-M-EN54 TEF Panel Settings MANUAL 160924



Content

Settings TEF GEKKO/OCTO+ Panel..... 3

 BMS Communication Settings TEF Panel (BMS menu 8-5-6) 3

 Software ESPA FIXED Architecture 3

Support 4



Settings TEF GEKKO/OCTO+ Panel

BMS Communication Settings TEF Panel (BMS menu 8-5-6)

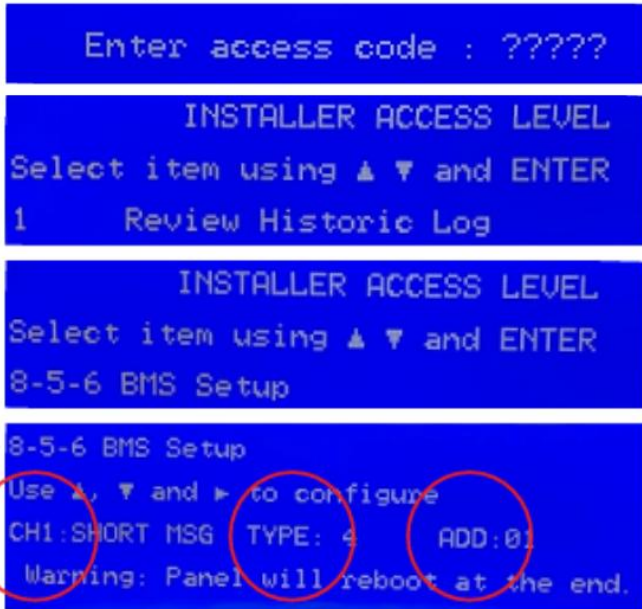


Image 1: Fire Alarm Panel programming

- ✓ Log-in as Installer
- ✓ Go-To Menu 8-5-6
- ✓ Choose: CH2 (GEKKO) / CH3 (OCTO+) (this is the output on the MB)
- ✓ Set protocol to : SHORT MSG
- ✓ Type protocol : 4
- ✓ ADD(res) : 1

Software ESPA FIXED Architecture

General Node Address

Connection Number is set in
MENU-8-5-9

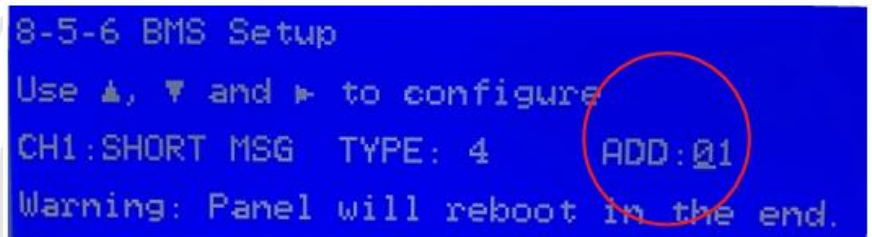


Image 2: Software ESPA FIXED Architecture



Support

For technical issues, please contact our 24/7 M2M Services Customer Support.

Phone: +359 88 560 7160

Email: support@m2mservices.com



For technical issues, please contact TEF Services Customer Support mo-fr
8.30-17.00h

Phone: +31 6 10 20 19 21

